

**VARIOKEYSTONE<sup>®</sup> INSERT CONNECTION, REMOVAL, EXCHANGE****1.0 SCOPE**

This document provides instructions on VarioKeystone<sup>®</sup> Insert connection, removal and exchange.


**2.0 PRODUCT DESCRIPTION**

VarioKeystone<sup>®</sup> allows insert (jack) connection and exchange on a plug terminated cable. Inserts can be easily exchanged or removed without re-termination.

**3.0 REFERENCE DOCUMENTS****4.0 PROCEDURE**

Tools required for proper termination:

- Screw driver
- Disassembly tool

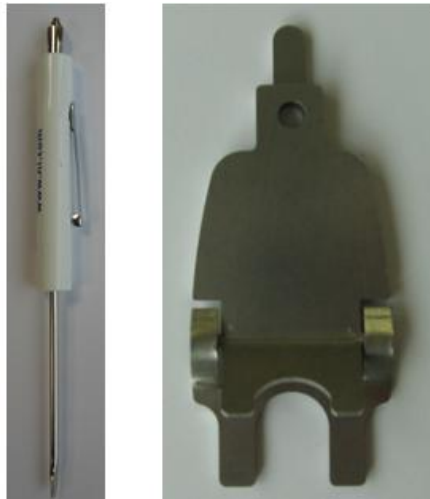**VarioKeystone<sup>®</sup> Insert connection**

1) Use Screwdriver to remove fit-cap from a connector. (Fig.1 and Fig. 2)

**Fig. 1****Fig. 2**

- 2) Connect Insert to Cable plug. Make sure marker on an Insert and Cable Plug are matching each other (Fig.3 and Fig.4)



**Fig. 3**



**Fig. 4**


### VarioKeystone® Insert removal

- 1) Set the disassembly tool so both legs were matching locking gaps on the Cable connector. (Fig.5)



**Fig.5**

- 2) Push the disassembly tool fully so the locking elements were squeezed. ( Fig.6)

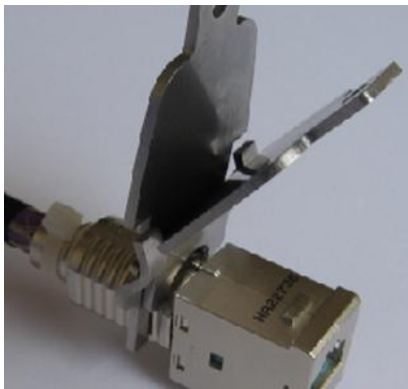

**Fig.6**

- 3) Squeeze the tool to disassembly the Insert from Cable connector (Fig.7, Fig.8, and Fig.9).



**Fig.7**



**Fig.8**



**Fig.9**

### VarioKeystone® Insert Exchange

In order to exchange VarioKeystone® Insert please follow the “Insert Removal” and “Insert Connection” procedures. This applies to C6A, C7 and dual modules.