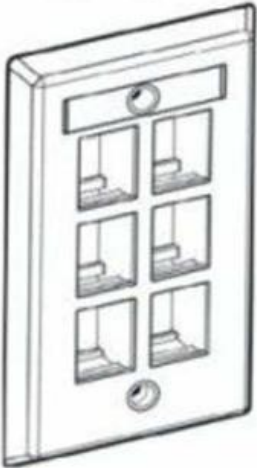
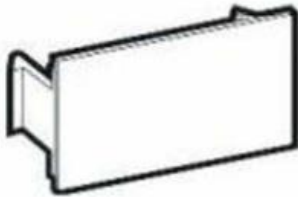
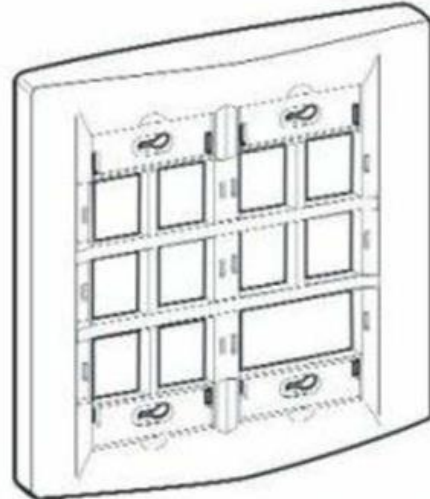
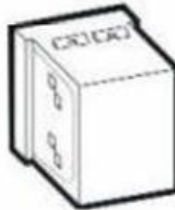


WALL PLATES

**Streamline
Series****Synergy
Series****Double Gang Series****Double Position
Blank Module****Single Position
Blank Module****Locking Tab**

Instructions also applicable for Modular office furniture bezels.

Loading the Wall Plate

Single position Modules or Blanks

1. Hold wall plate in one hand oriented so the arrow on the back right side facing up.
2. Grasp the terminated module or single position blank in opposite hand, oriented so that the locking tab on the front side is facing down.
3. From the back of the plate, carefully align the module with the opening on wall plate.

4. Push and snap module firmly into the bezel until both top and bottom latches seat completely.
5. Turn the plate over and make sure that the jack sits flush with the front of the wall plate.

Double Position Module or Blank (Used in Multimedia Plate Only)

Note: The double position blank module is inserted from the front of the plate. The latches are on the sides of the module.

1. Terminate the interface using applicable termination method.
2. Hold wall plate in one hand oriented so the arrow on the backside is facing up.
3. Feed terminated module from the rear of the plate completely through to the front side of the plate.
4. Align module with the double opening in wall plate.
5. Push and snap module firmly into the bezel until the both side latches seat completely.

Hinged Screw Cover/Clear Label Holder (Where applicable)

1. Remove clear plastic covering off hinge cover.
2. Pinch and bow the screwcap between thumb, index, and middle fingers.
3. Work hinge pins on screw cover into the hinge recesses on the wall plate.
4. Release and snap screw cover into closed position.

Icons (where applicable)

1. Snap off icons from Snapz™ Icon tree.
2. Press the legs on the back of the icon into the screwdriver.
3. Slots adjacent to the applicable jack/module.